

# Using navigation menus



## Playing data discs **WMA** **MP3** **JPEG** **CD** (CD-text only)

**WMA** **MP3** **JPEG**

You can play JPEG files on DVD-RAM or play HighMAT discs without using the HighMAT function (→ page 11, "Play as Data Disc" in Other Menu).

### ■ Using playback menus (except JPEG files on DVD-RAM)

While the menu is displayed

Press [**▲ ▼**] to select "All", "Audio", or "Picture" and press [**ENTER**].

 
● To display/exit the screen

Press [**TOP MENU**].

### ■ Using navigation menus

1 Press [**MENU**].

2 Press [**▲ ▼ ◀ ▶**] to select the group or audio/picture content and press [**ENTER**].

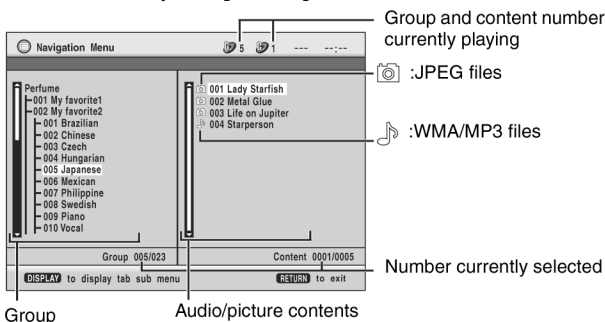

● To enjoy listening to WMA/MP3 contents while showing a JPEG image on the screen

Select a JPEG file first, and then select tracks.

(The opposite order is not effective.)

● To exit the screen


Press [**MENU**].

### To use the contents screen to find a track

 **CD** (CD-text only)

While the menu is displayed

Press [**▲ ▼**] to move through the tracks and press [**ENTER**].

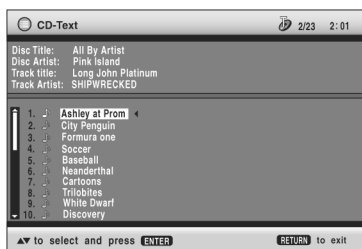

● Press [**ANGLE/PAGE**] to skip 10 lines at a time.

## Using the submenu **WMA** **MP3** **JPEG**

1 While the menu is displayed, press [**DISPLAY**]

|                |  |
|----------------|--|
| ✓Multi         | Groups and content   |
| List           | Contents only  |
| Tree           | Groups only  |
| Thumbnail      | Thumbnail images <b>JPEG</b>   |
| Next group     | To go to next groups <b>WMA</b> <b>MP3</b>                           |
| Previous group | To go to previous groups <b>WMA</b> <b>MP3</b>                       |
| All            | WMA/MP3 and JPEG files   |
| Audio          | WMA/MP3 files only   |
| Picture        | JPEG files only  |
| Help display   | To switch between guide messages and the elapsed play time indicator |
| Find           | To search by content or group title (→ see below)                    |

2 Press [**▲ ▼**] to select the submenu and press [**ENTER**].

### ■ Searching by content or group title **WMA** **MP3** **JPEG**

Place the cursor on the group title to search a group, or place the cursor on the content title to search contents.

1 Select "Find" (→ see above).



2 Press [**▲ ▼**] to select a character and press [**ENTER**].

● Repeat to enter another characters.

● Lower case is also searched.

● Press [**◀ ▶**] to skip between A, E, I, O and U.

● Press [**◀**] to erase a character.

● Erase the asterisk (\*) to search for the titles starting with that character.

3 Press [**▶**] to select "Find" and press [**ENTER**].

The search result screen appears.

4 Press [**▲ ▼**] to select the content or group and press [**ENTER**].

### Tips for making WMA/MP3 and JPEG discs (For CD-R/CD-RW)

● Discs must conform to ISO9660 level 1 or 2 (except for extended formats).

● This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.

#### Naming folders and files

 
At the time of recording, prefix folder and file names with 3-digit numbers in the order you want to play them (this may not work at times).

Files must have the extension:

“.WMA” or “.wma”

“.MP3” or “.mp3”

“.JPG”, “.jpg”, “.JPEG” or “.jpeg”

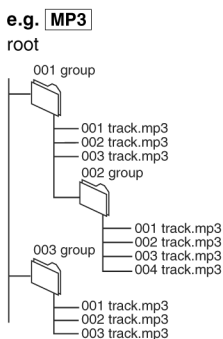

#### **WMA**

● You cannot play WMA files that are copy protected.

#### **MP3**

● This unit is not compatible with ID3 tags.

● Compatible sampling rate: 8, 11.02, 12, 16, 22.05, 24, 32, 44.1, and 48 kHz

#### **JPEG**

● To view JPEG files on this unit:

– Take them on a digital camera that meets the DCF Standard (Design rule for Camera File system) Version 1.0. Some digital cameras have functions that are not supported by the DCF Standard Version 1.0 like automatic picture rotation which may render a picture unviewable.

– Do not alter the files in any way or save them under a different name.

● This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play associated sound.